

1. Scan the barcode below and place the scanner in the base:



Standard Product Defaults

2. Scan the barcode below and place the scanner in the base:



Override Locked Imager

3. USB interface



USB Keyboard (PC)

4. Expand UPC-E to UPC-A



On

5. UPC-A check digit OFF



Off

6. UPC-A number system (pre-amble) OFF:



Off

7. UPC-E check digit OFF



Off

8. UPC-E number system (pre-amble)




Off

9. [ Prefix



[ Prefix

10. ] Suffix

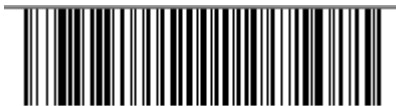

] Suffix